



GARAGE DOOR TOPSEAL FITTING INSTRUCTIONS

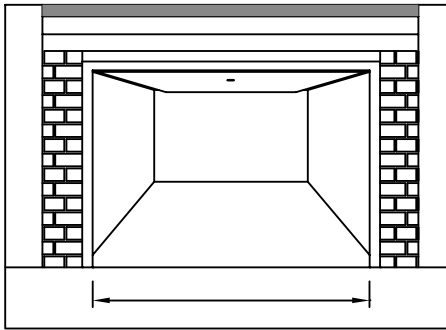


STEP ONE

Measure the overall width of the garage door frame from the inside edges then cut the seal to the required length.

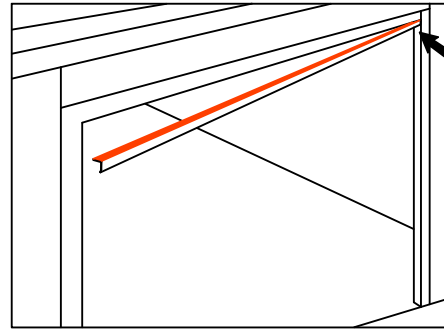


STEP TWO

Simply line the seal at one corner end of the underside of the top door frame making sure the inside corner of the seal is in line with the front face of the garage door when it is closed.

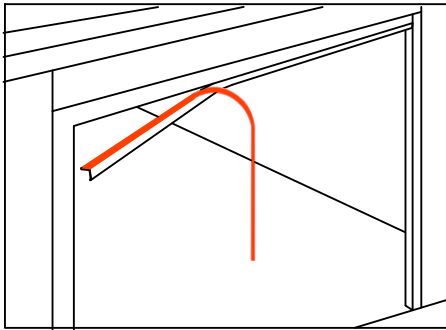

STEP THREE

Peel back the release paper from the edge of the double sided tape and bit by bit carefully move along the seal pressing it onto the frame.

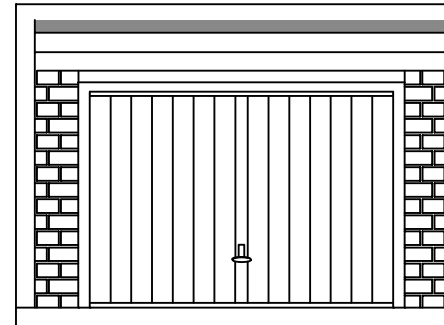

STEP FOUR

Close the door and make sure the tip of the seal is in contact with the front face of the door. Use self tapping screws for extra fixing if required.