



## GARAGE DOOR FLOORSEAL FITTING INSTRUCTIONS

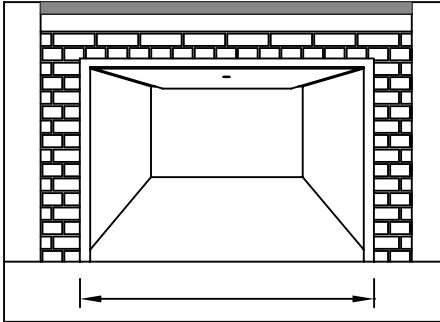


### STEP ONE

Measure the overall width of the garage door opening (brick to brick) and trim if needed. Remember you will have to cut the seal to fit around the door frame.

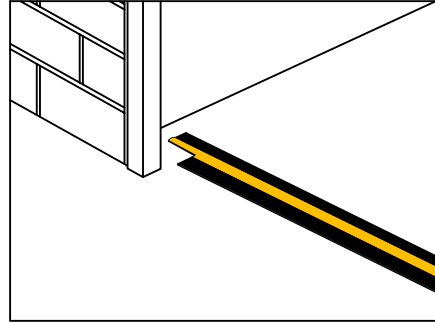


### STEP TWO

Offer the ends of the seal against the door frame to work out how to cut the recess at each end of the seal, mark with a pencil where to cut the seal using either a Hacksaw, Stanley Knife or Anvil Cutters (see our accessories).

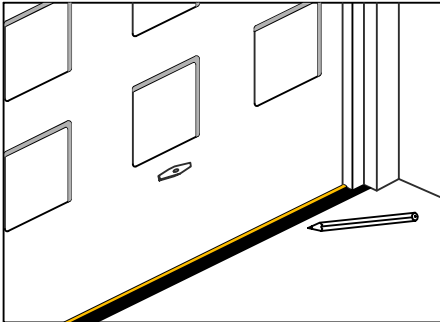


### STEP THREE

Place the floor seal up against the **INSIDE** of the garage door in its closed position and push the thinnest part of the seal under the door. Once you are happy with the position mark along the length of the seal with a pencil, then open the door and carefully mark along the outside edge of the seal.

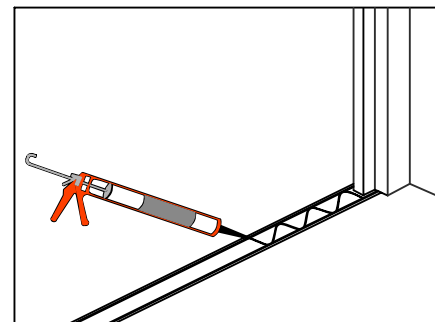

### STEP FOUR

Using the Polyurethane adhesive apply a line roughly 1cm inside the lines, then apply a zig zag line of adhesive in between.

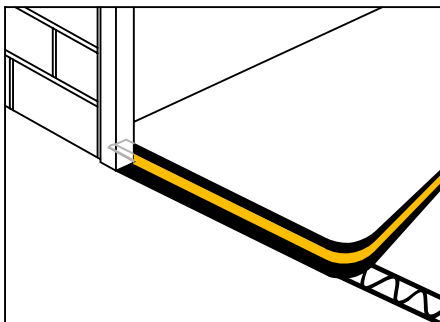

### STEP FIVE

Start from one end and press the floorseal down onto the sealant working your way along the length of the seal, clean any sealant residue and allow to set for 24 hours.

